

Easy Installation . . . for a natural look

Curv-Rite® is a registered trademark of Curv-Rite, Inc.



Lawn Edging Installation Instructions

1. Slide ends of edging strips together as shown to connect.
2. Layout edging to visualize your bed design.
3. Dig a trench 4" deep with a vertical wall on lawn side.
4. Place edging against vertical wall with top of edging just below top of cut grass.
5. Stake as shown and/ or backfill to hold edging in place. Stakes may not be needed in every stake pocket.
6. Compact soil with foot such that soil engages ribs on edging to resist frost heave.

Tools Needed: Hammer, Spade, Hacksaw



Wear gloves and eye protection.
Do not dig near underground objects
such as electrical cables, gas lines, etc.



1.




2.




3.



4.

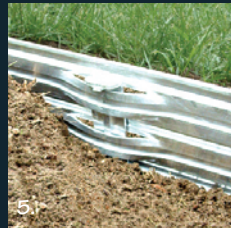

5.

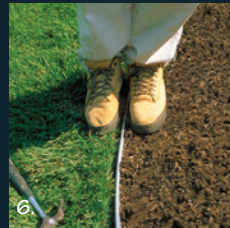

6.

curv-rite® aluminum edging systems

curv-rite.com

1-800-366-2878