




**WILL NOT  
RUST**


# Aluminum Landscape Edging

**Durable  
Heavy-Duty  
Aluminum**

## Easy Installation

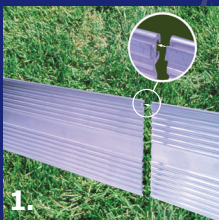

1. Slide ends of edging strips together as shown to connect.
2. Layout edging to visualize your bed design.
3. Dig a trench 4" deep with a vertical wall on lawn side.

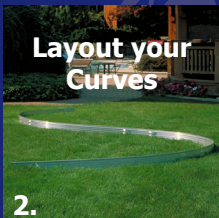

4. Place edging against vertical wall with top of edging just below top of cut grass.
5. Stake as shown and/or backfill to hold edging in place. Stakes may not be needed in every tabbed pocket.



6. Compact soil with foot such that soil engages ribs on edging to resist frost heave.



Wear gloves and eye protection. Do not dig near underground objects such as electrical cables, gas lines, etc.

Covered by one or more of the following United States patents: 5020272, 5941018. Foreign patents pending. Copyright © 2009 Curv-Rite, Inc.